

# **LCD Monitor**

## **User Manual**

The color and the appearance may differ depending on the product, and the specifications are subject to change without prior notice to improve the performance.

# Table Of Contents

---

## MAJOR SAFETY PRECAUTIONS

Before You Start .....	1-1
Custody and Maintenance .....	1-2
Safety Precautions .....	1-3

## INSTALLING THE PRODUCT

Package Contents .....	2-1
Connecting with a PC .....	2-2
Using the Touchscreen .....	2-3
Connecting an External Device Using the HDMI Cable .....	2-4
Connecting an USB cable .....	2-5
Connecting Headphones .....	2-6
Kensington Lock .....	2-7

## USING THE PRODUCT

Setting the Optimal Resolution .....	3-1
Standard Signal Mode Table .....	3-2
Installing the Device Driver .....	3-3
Installing the USB Driver .....	3-4
Product Operating Buttons .....	3-5
Using the Screen Adjustment Menu (OSD: On Screen Display) .....	3-6

## INSTALLING THE SOFTWARE

Natural Color .....	4-1
MagicTune .....	4-2
MultiScreen .....	4-3

## TROUBLESHOOTING

Monitor Self-Diagnosis .....	5-1
Before Requesting Service .....	5-2
FAQ .....	5-3

## MORE INFORMATION

Specifications .....	6-1
Power Saving Function .....	6-2
Contact SAMSUNG WORLDWIDE .....	6-3
Correct Disposal of This Product (Waste Electrical & Electronic Equipment) - Europe only .....	6-4

---



# 1 Major Safety Precautions

---

## 1-1 Before You Start

---

### Icons used in this manual

ICON	NAME	MEANING
	Caution	Indicates cases where the function may not work or the setting may be canceled.
	Note	Indicates a hint or tip to operate a function.

### Using this Manual

- Make yourself fully aware of the safety precautions before using this product.
- If a problem occurs, refer to the 'troubleshooting' section.

### Copyright Notice

The contents of this manual are subject to change without prior notice for performance improvement.

Copyright © **2009 Samsung Electronics Co., Ltd. All Rights Reserved.**

The copyright of this manual is reserved by Samsung Electronics, Co., Ltd.

The contents of this manual may not be partially or in whole reproduced, distributed or used in any form without the written permission of Samsung Electronics, Co., Ltd.

The SAMSUNG logo and SyncMaster are the registered trademarks of Samsung Electronics, Co., Ltd.

Microsoft, Windows and Windows NT are the registered trademarks of Microsoft Corporation.

VESA, DPM and DDC are the registered trademarks of the Video Electronics Standard Association.

The ENERGY STAR® logo is the registered trademark of the U.S. Environmental Protection Agency.


All other trademarks mentioned herein belong to their respective companies.


## 1-2 Custody and Maintenance

### External Surface and Screen Maintenance

Clean the product with a soft dry cloth.

- Do not clean the product with an inflammable substance such as benzene or thinner or with a wet cloth. This may result in a problem with the product.
- Do not scratch the screen with your fingernails or a sharp object.  
This may result in scratches or damage to the product.
- Do not clean the product directly by spraying water onto the product.  
If water enters the product, it may result in fire, electric shock or a problem with the product.
- A white stain may be generated on the surface of the high-glossy model due to the inherent characteristics of the material, if a supersonic humidifier is used.

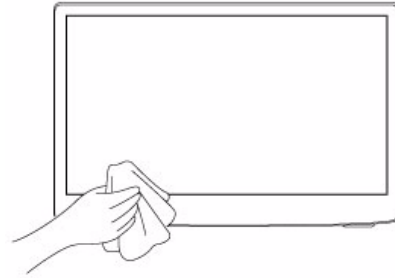


 The appearance and the color may differ depending on the model.

### Securing the Installation Space

- Keep the required distances between the product and other objects (e.g. walls) to ensure proper ventilation.  
Failing to do so may result in fire or a problem with the product due to an increase in the internal temperature.  
Install the product so the required distances shown in the figure are kept.

 The appearance may differ depending on the product.

When installing the product with a stand

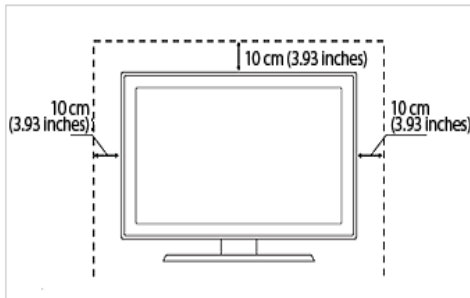

### About persistent images



- Displaying a still image for a long time may create a persistent image or stain on the screen. If you do not use the product for a long time, set the power-saving mode or screen saver.
- Due to technological constraints of the LCD Panel manufacturer, the images generated by this product may appear either brighter or darker than normal by appr. 1ppm (parts per million) pixel.

The number of sub-pixels of an LCD panel by size: The number of Sub-Pixels = Max. Horizontal Resolution x Max. Vertical Resolution x 3

Example) If the maximum resolution is 1920 x 1080, the number of sub-pixels is 1920 x 1080 x 3 = 6,220,800.

## 1-3 Safety Precautions

### Icons used for safety precautions

ICON	NAME	MEANING
	Warning	Failing to follow the precautions marked with this sign, may result in a serious injury or even a fatality.
	Caution	Failing to follow the precautions marked with this sign, may result in a personal injury or property damage.

### Meaning of Signs



Do not perform.



Do not disassemble.



Do not touch.



Must be followed.



The power plug must be unplugged from the wall outlet.



Must be grounded to prevent electric shock.

### Power Related

 The following images are for your reference and may differ depending on models and countries.



#### Warning




Avoid using a damaged power cord or plug or a loose power outlet.

- Otherwise, it may result in electric shock or fire.




Avoid plugging in or unplugging the power supply with wet hands.

- Otherwise, it may result in electric shock.

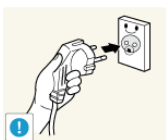

Make sure to connect the power cord to a grounded wall outlet (for insulation class 1 equipment only).

- Otherwise, it may result in electric shock or injury.

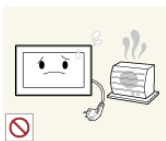


Keep the power cord and the product away from a heater.

- Otherwise, it may result in electric shock or fire.




Avoid connecting multiple electric appliances to a single wall outlet.

- Otherwise, it may result in fire due to overheating of the wall outlet.

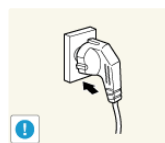

Plug the power plug in firmly.

- Otherwise, it may result in fire.

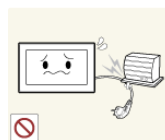

Avoid bending or twisting the power cord excessively and avoid placing heavy objects on the cord.


- Otherwise, it may result in electric shock or fire due to a damaged power cord.



If the pins of the power plug or the wall outlet are covered in dust, clean it using a dry cloth.


- Otherwise, it may result in fire.

## Caution

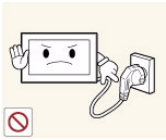


Avoid unplugging the power plug while the product is operating.

- Otherwise, it may damage the product due to electric shock.

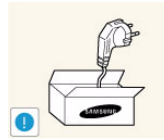


Make sure to use only the power cord supplied by our company. In addition, do not use the power cord of another electric appliance.

- Otherwise, it may result in electric shock or fire.

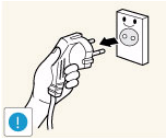

When unplugging the power plug from the wall outlet, make sure to hold it by the plug and not by the cord.

- Otherwise, it may result in electric shock or fire.

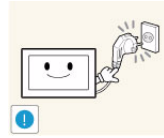

Connect the power plug to a wall outlet that can be easily reached.

- When a problem occurs with the product, you must unplug the power plug to cut the power off completely. You cannot cut the power off completely using only the power button on the product.


## Installation Related

### Warning



Avoid placing burning candles, mosquito-repellent or cigarettes on the product and installing the product near a heater.

- Otherwise, it may result in fire.

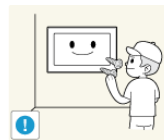


Ask an installation engineer or relevant company to install the product onto the wall.

- Otherwise, it may result in injury.
- Make sure to use the specified wall mount.



Avoid installing the product in a badly-ventilated location such as inside a bookshelf or closet.

- Otherwise, it may result in fire due to internal over-heating.

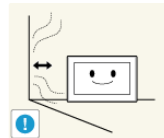

Keep a distance of at least 10 cm from the wall when installing the product for ventilation.

- Otherwise, it may result in fire due to internal over-heating.




Keep the plastic bags used to pack the product away from children.

- If children place the plastic bags over their heads, they may suffocate.




Avoid installing the product in a location that is unstable or exposed to excessive vibrations such as on an unstable or slanted shelf.

- The product may fall and this may result in damage to the product or injury.
- If you use the product in a location exposed to excessive vibrations, it may result in a problem with the product or fire.

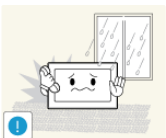

Avoid installing the product in a location exposed to dust, moisture (sauna), oil, smoke or water (rain drops) and installing it within a vehicle.

- This may result in electric shock or fire.

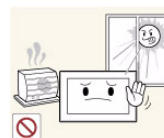

Avoid installing the product in a location exposed to direct sunlight and installing the product near a heat source such as a fire or heater.

- This may shorten the product life cycle or cause fire.



Avoid installing the product at an easily reachable height where children may reach it.


- If a child touches the product, the product may fall and this may result in injury.
- Since the front part is heavier, install the product on a flat and stable surface.

## Caution



Do not let the product drop while moving it.

- This may result in a problem with the product or injury.

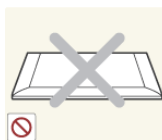


Do not place the product face down on the floor.

- This may damage the panel of the product.



When installing the product on a console or shelf, make sure that the front of the product does not protrude out of the console or shelf.

- Otherwise, this may cause the product to fall off and result in a malfunction or injury.
- Make sure to use a cabinet or shelf suitable to the size of the product.

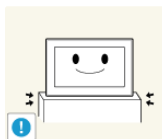

When putting the product down, handle it gently.

- Otherwise, it may result in a problem with the product or injury.



If the product is installed in a location where the operating conditions vary considerably, a serious quality problem may occur due to the surrounding environment. In this case, install the product only after consulting one of our service engineers about the matter.

- Places exposed to microscopic dust, chemicals, too high or low temperature, high humidity, such as airports or stations where the product is continuously used for a long time and so on.

## Cleaning Related




Since using a surfactant, which contains a large amount of alcohol, solvent or other strong chemicals, may result in the discoloration or cracking of the product exterior or the panel surface coming off, be sure to use the recommended cleansing agent only.

You can purchase the recommended cleansing agent from a service center.



Before cleaning the product, unplug the power cord.

- Otherwise, it may result in electric shock or fire.

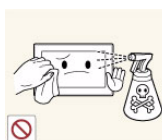

When cleaning the product, do not spray water directly over the product parts.


- Make sure that water does not enter the product.
- Otherwise, it may result in fire, electric shock or a problem with the product.

## Caution



Avoid spraying cleansing agent directly onto the product.


- This may result in discoloration or cracking of the exterior of the product or the panel coming off.

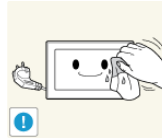

When cleaning the product, disconnect the power cord and clean the product with a soft dry cloth.


- Avoid using chemicals such as wax, benzene, alcohol, thinner, mosquito-repellent, fragrance, lubrication or cleansing agent when cleaning the product.

This may result in the exterior being deformed or the print being removed.

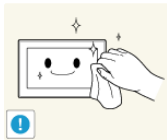

Use a soft, damp cloth with a "monitor-exclusive cleansing agent" and wipe the product with it.

- If no monitor-exclusive cleansing agent is available, dilute a cleansing agent with water at a ratio of 1:10 before cleaning the product.

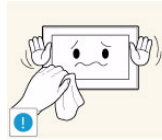

Since the exterior of the product is easily scratched, be sure to use a proper cleansing cloth. Use the cleansing cloth with a small amount of water. However, if the cloth is contaminated by alien substances, it may result in scratches to the exterior; therefore shake off any alien substances from the cloth before using it.

## Usage Related

### Warning



Since a high voltage runs through the product, never disassemble, repair or modify the product yourself.

- Otherwise, it may result in fire or electric shock.
- If the product needs to be fixed, contact a service center.



When cleaning the product, do not spray water directly over the product parts.

- Make sure that water does not enter the product.
- Otherwise, it may result in fire, electric shock or a problem with the product.



If the product generates a strange noise, a burning smell, or smoke, unplug the power plug immediately and contact a service center.

- Otherwise, it may result in electric shock or fire.



Avoid letting children to hang or climb onto the product.

- Otherwise, it may result in the product falling and this may result in injury or death.




If you drop the product or the case is damaged, turn the power off and unplug the power cord. Contact a service center.

- Otherwise, it may result in fire or electric shock.



Avoid placing objects such as toys and cookies on top of the product.

- If a child hangs over the product to grab an object, the object or the product may fall and this may result in injury or even death.

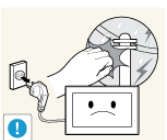

When thunder or lighting occurs, unplug the power cord and under no circumstance touch the antenna cable as this is dangerous.

- Otherwise, it may result in electric shock or fire.



Avoid dropping an object over the product or cause impact to the product.


- Otherwise, it may result in electric shock or fire.






Avoid moving the product by pulling the power cord or antenna cable.

- Otherwise, it may result in electric shock, fire or a problem with the product due to damage to the cable.

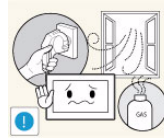


When a gas leak occurs, do not touch the product or the power plug and ventilate immediately.

- A spark may result in an explosion or fire.
- During a thunder or lighting storm, do not touch the power cord or antenna cable.

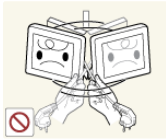

Avoid lifting up or move the product by holding only the power cord or signal cable.

- Otherwise, it may result in electric shock, fire or a problem with the product due to damage to the cable.

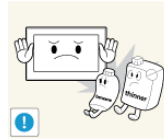


Avoid using or placing inflammable spray or objects near the product.

- This may result in an explosion or fire.



Take care not to block the vent by a table cloth or curtain.

- Otherwise, it may result in fire due to internal overheating.

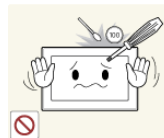

Avoid inserting metal objects such as a chopsticks, coins or hairpins, or inflammable objects into the product (the vents, ports, etc).

- If water or an alien substance enters the product, turn the power off, unplug the power cord and contact a service center.
- Otherwise, it may result in a problem with the product, electric shock or fire.



Avoid placing a liquid container such as a vase, flowerpot, beverage, cosmetics or drugs, or a metal object over the product.


- If water or an alien substance enters the product, turn the power off, unplug the power cord and contact a service center.
- Otherwise, it may result in a problem with the product, electric shock or fire.

## **Caution**



Displaying a still image for a long time may create a persistent image or stain on the screen.

- If you do not use the product for a long time, use the power-saving mode or set the screensaver to the moving picture mode.

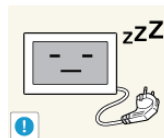

When not using the product for a long time such as leaving your home, unplug the power cord from the wall outlet.

- Otherwise, it may cause dust accumulation and result in fire caused by overheating or short circuit or result in an electric shock.




Set the appropriate resolution and frequency for the product.

- Otherwise, it may result in eye strain.



Avoid turning the product upside down or move the product holding only the stand.

- This may cause the product to fall resulting in damage to the product or injury.

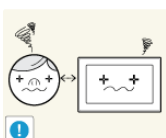


Watching the product from too close a distance continuously may damage your eyesight.




Avoid using a humidifier or cooker near the product.

- Otherwise, it may result in electric shock or fire.

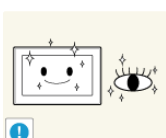


It is important to give your eyes some rest (5 minutes every hour) when viewing the product screen for long periods of time.

- This will alleviate any eye strain.

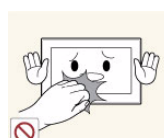

Since the display panel is hot after using it for a long time, do not touch the product.

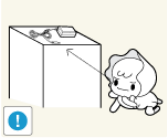

Keep small accessories away from the children.



Take care when adjusting the angle of the product or the height of the stand.

- If your hand or finger is caught, you may be injured.
- If the product is tilted excessively, the product may fall and this may result in injury.




Avoid placing a heavy object over the product.

- Otherwise, it may result in a problem with the product or injury.

•

## Maintaining the Correct Posture when Using this Product

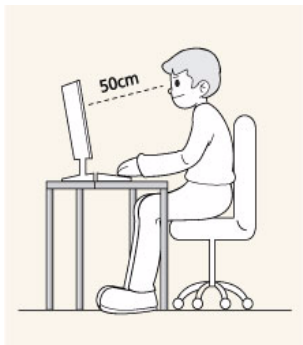

Maintain the correct posture when using this product.

- Straighten your back.
- Keep a distance of 45~50 cm from your eyes to the screen. Look down at the screen and face the screen forwards.
- Maintain the correct posture when using this product.
- Adjust the angle of the product so that light is not reflected onto the screen.
- Keep your elbow at a right angle and keep your arm level with the back of your hand.
- Keep your elbow at a right angle.
- Place your heels flat on the ground while keeping your knees at an angle of 90 degrees or higher and maintain the position of your arm so that your arm is below your heart.











# 2 Installing the Product

## 2-1 Package Contents

- Unpack the product and check if all of the following contents have been included.
- Store the packaging box in case you need to move the Product at a later stage.



Monitor

CONTENTS			
			
Installation Manual	Product Warranty	User Manual	D-Sub Cable
			
Power Cord	USB Cable	Cleaning Cloth	Stylus pen
OPTIONAL PARTS			
			
HDMI Cable	HDMI to DVI Cable		


- The cleaning cloth is supplied with black high-glossy models only.

## 2-2 Connecting with a PC

 The connecting part may differ depending on the product model.

1. Connect the product to a PC depending on the video output supported by the PC.


- When the graphics card provides D-Sub (Analog) output
  - Connect the [RGB IN] port of the product to the [D-Sub] port on your PC using the D-Sub cable.

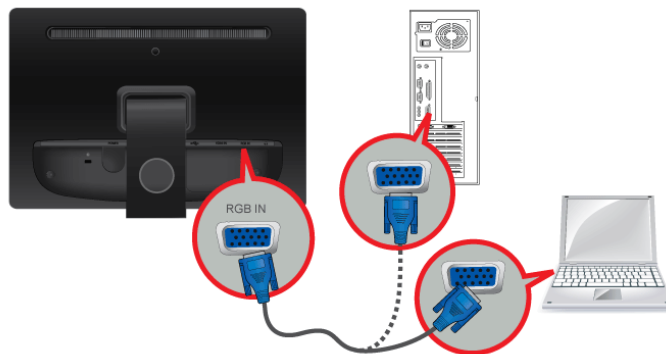

- When the graphics card provides DVI(Digital) output
  - Connect the [HDMI IN] port of the product to the [DVI] port on your PC using the HDMI to DVI cable.




- When the graphics card provides HDMI output
  - Connect the [HDMI IN] port of the product to the [HDMI] port on your PC using the HDMI cable.

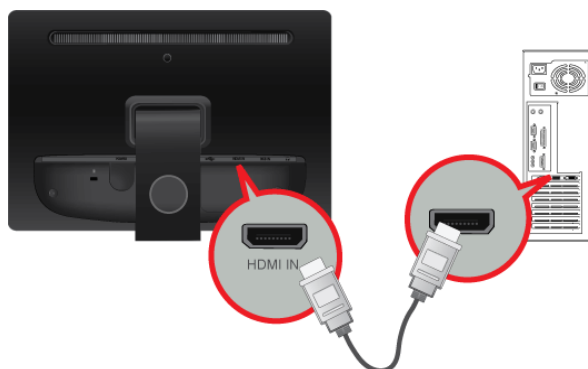

2. Connect one end of the power cord to the DC-Adapter and plug the other end into a dedicated 220V or 110V wall outlet.

(The input voltage is switched automatically.)

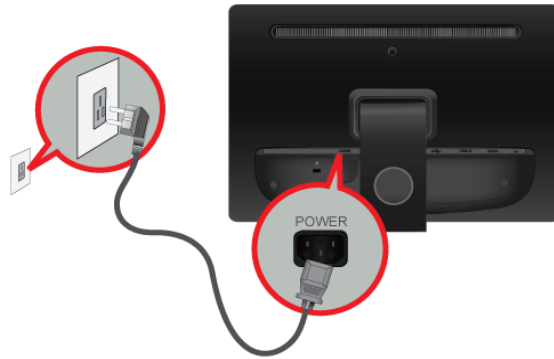

🔌 When the product is connected to a PC, you can turn the product on and use it.


When both the HDMI and D-Sub (<Analog>) cables are connected, you can select the input signal <Analog/HDMI> by pressing the  button.

## 2-3 Using the Touchscreen


To use the touch screen function, connect both the D-Sub (or HDMI or HDMI - DVI) cable and USB cable, install the touch screen driver and set the touch screen monitor as "default monitor."

Connect the product to a PC depending on the video output supported by the PC.

- When the graphics card provides D-Sub (Analog) output
  - Connect the [RGB IN] port of the product to the [D-Sub] port on your PC using the D-Sub cable.
  - Connect the [USB] port of the product to the [USB] port on your PC using the D-Sub cable.

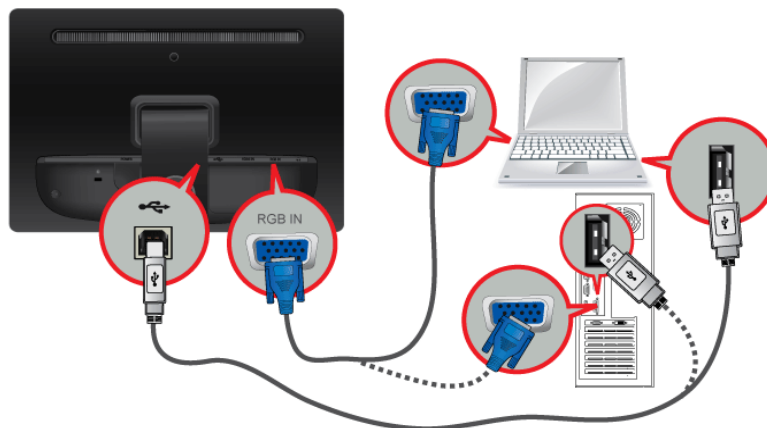


- When the graphics card provides HDMI output
  - Connect the [HDMI IN] port of the product to the [HDMI] port on your PC using the HDMI cable.
  - Connect the [USB] port of the product to the [USB] port on your PC using the D-Sub cable.

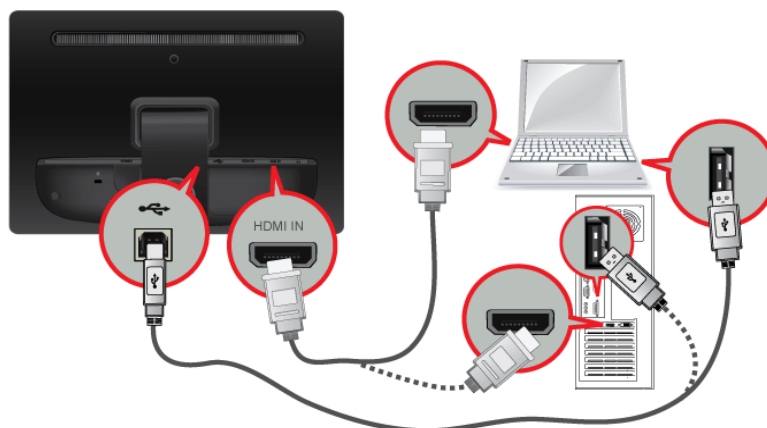

- When the graphics card provides DVI(Digital) output
  - Connect the [HDMI IN] port of the product to the [DVI] port on your PC using the HDMI to DVI cable.

- Connect the [🔌] port of the product to the [USB] port on your PC using the D-Sub cable.

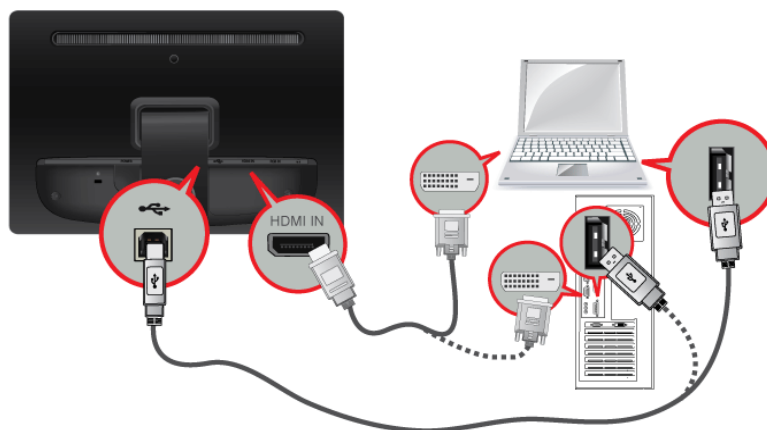



- If you connect the USB port, sound will be outputted from the speaker on the back of the monitor.
- If the driver is not installed, the touchscreen function will not work.
- The multi-touch function only works in a Windows 7 environment. It does not operate in a Windows XP or Vista.
- With innovative, highly sensitive touchscreen technology, you don't need to use much force when touching the screen.
- Touching the screen with a rough stick or metal object can scratch it. Ensure you use a dedicated stylus.
- Any foreign substance, such as dust or moisture, on the screen can cause a touchscreen malfunction. Please wipe the screen and the screen's frame with a soft cloth as often as possible.
- In order to prevent breakage, avoid applying excessive force to the screen.
- Connect or remove a USB device following the safe installation and removal instructions recommended by Microsoft. If there is any problem with the touch screen function or sound output after a USB device is connected, reconnect the USB cable or change the connection port.

## 2-4 Connecting an External Device Using the HDMI Cable

---

Connect the HDMI output port of your digital output device to the [HDMI IN] port of the product using the HDMI cable.

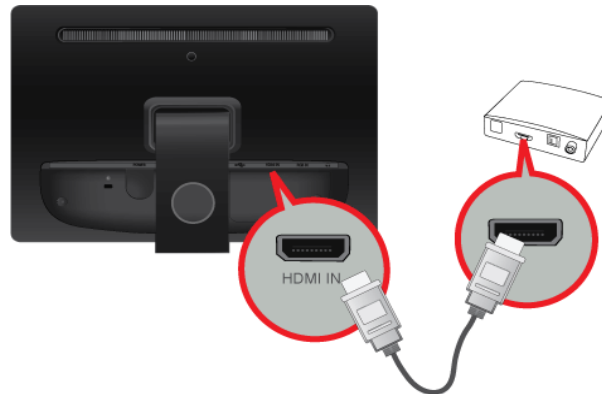


- When all the connections are complete, you can turn on and use the product and your DVD player (or digital output device). Press the [  ] button and select <HDMI> as an input signal.



## 2-5 Connecting an USB cable

---


Connect to the [🖱️]ports on the monitor and the USB device.

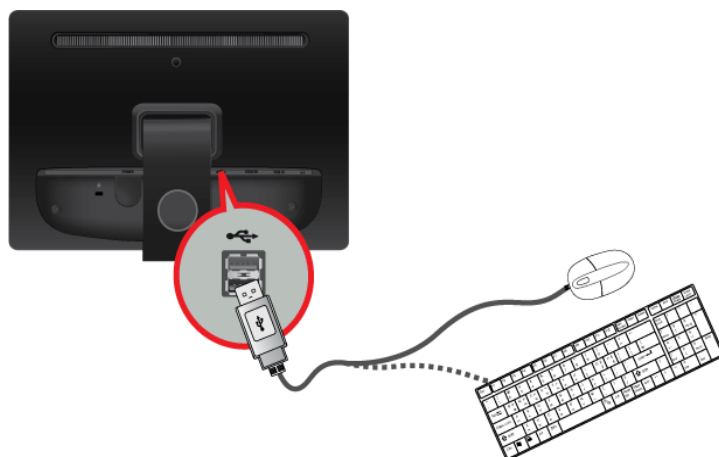

## 2-6 Connecting Headphones

---

Connect your headphones to the Headphone connection terminal.

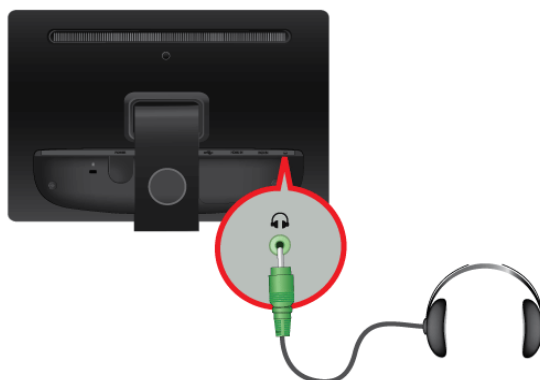


 Sound is only supported when the HDMI or USB port is connected.

## 2-7 Kensington Lock

---

A Kensington Lock is an anti-theft device that enables users to lock the product so that they can safely use it in public locations. Since the shape and usage of the locking device may differ depending on the model and the manufacturer, for more information, refer to the User Manual supplied with the locking device. You have to purchase an additional locking device.

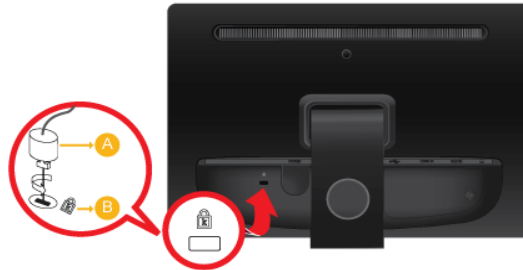

### Locking the product

1. Insert the locking part of the locking device into the hole of the Kensington lock of the product( **B** ) and turn it in the locking direction( **A** ).
2. Connect the Kensington lock cable.
3. Tie the Kensington lock cable to a desk or heavy object.

 You can purchase the locking device from an electronics store, an online shop, or our service center.


## 3 Using the product

---

### 3-1 Setting the Optimal Resolution

---

If you turn the power on after purchasing the product, a message regarding the optimal resolution setting appears on the screen. Select a language and the optimal resolution.

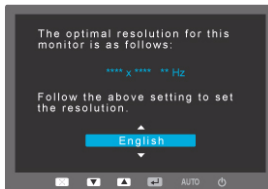


▲/▼ : You can select a language with these buttons.

MENU : If you press this button, the message disappears.

- 🔧 • The message appears up to 3 times if the resolution has not been set to the optimal resolution.
- To set the resolution to the optimal resolution
  - When the PC is turned off, connect the product and the PC and turn the power on.
  - Right-click over the Desktop and select 'Properties' from the pop-up menu.
  - In the 'Settings' tab, set the resolution to the optimal resolution.
  - The steps above may vary depending on the Windows OS.

## 3-2 Standard Signal Mode Table

-  The LCD monitor has one optimal resolution for the best visual quality depending on the screen size due to the inherent characteristics of the panel, unlike for a CDT monitor.

Therefore, the visual quality will be degraded if the optimal resolution is not set for the panel size. It is recommended setting the resolution to the optimal resolution of the product.

If the signal from the PC is one of the following standard signal modes, the screen is set automatically. However, if the signal from the PC is not one of the following signal modes, a blank screen may be displayed or only the Power LED may be turned on.

Therefore, configure it as follows referring to the User Manual of the graphics card.

DISPLAY MODE	HORIZONTAL FREQUENCY (KHZ)	VERTICAL FREQUENCY (HZ)	PIXEL CLOCK (MHZ)	SYNC POLARITY (H/ V)
VESA, 640 x 480	31.469	59.940	25.175	-/-
VESA, 800 x 600	35.156	56.250	36.000	+/+
VESA, 800 x 600	37.879	60.317	40.000	+/+
VESA, 1024 x 768	48.363	60.004	65.000	-/-
VESA, 1280 x 800	49.702	59.810	83.500	-/+
VESA, 1280 x 960	60.000	60.000	108.000	+/+
VESA, 1280 x 1024	63.981	60.020	108.000	+/+
VESA, 1440 x 900	55.935	59.887	106.500	-/+
VESA, 1600 x 1200	75.000	60.000	162.000	+/+
VESA, 1680 x 1050	65.290	59.954	146.250	-/+
VESA, 1920 x 1080	67.500	60.000	148.500	+/+

### Horizontal Frequency


The time taken to scan one line from the left-most position to the right-most position on the screen is called the horizontal cycle and the reciprocal of the horizontal cycle is called the horizontal frequency. The horizontal frequency is represented in kHz.

### Vertical Frequency


A panel must display the same picture on the screen tens of times every second so that humans can see the picture. This frequency is called the vertical frequency. The vertical frequency is represented in Hz.

### 3-3 Installing the Device Driver

---

 If you install the device driver, you can set up the appropriate resolution and frequency for the product. The device driver is included on the CD-ROM supplied with the product. If the supplied drive file is corrupted, please visit a service center or Samsung Electronics website(<http://www.samsung.com/>), and download the driver.

1. Insert the driver installation CD-ROM into the CD-ROM drive.
2. Click on "Windows Driver".
3. Complete the remaining installation steps according to the instructions displayed on the screen.
4. Select the model of your product from the model list.

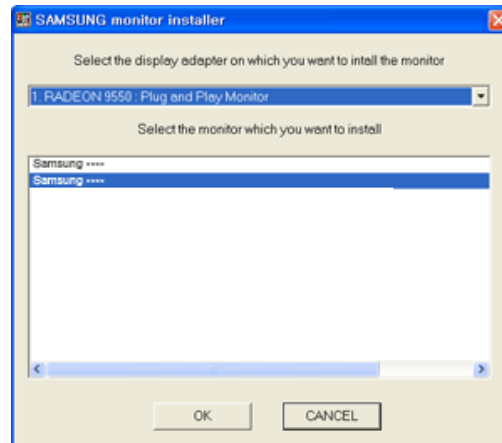


5. Check if the appropriate resolution and screen refresh rate are displayed in the Control Panel settings. For more information, refer to the document about the Windows operating system.

### 3-4 Installing the USB Driver


To use the touch screen monitor, the USB driver must be installed. The device driver is included on the CD-ROM supplied with the product.

If the supplied drive file is corrupted, please visit a service center or Samsung Electronics website(<http://www.samsung.com/>), and download the driver.

1. Connect the monitor to your PC using the USB cable.
2. Insert the driver installation CD-ROM into the CD-ROM drive.
3. Click on "Touchscreen Driver". The driver installation will start automatically. (Double-click on the file in the "Touchscreen Driver" folder.)

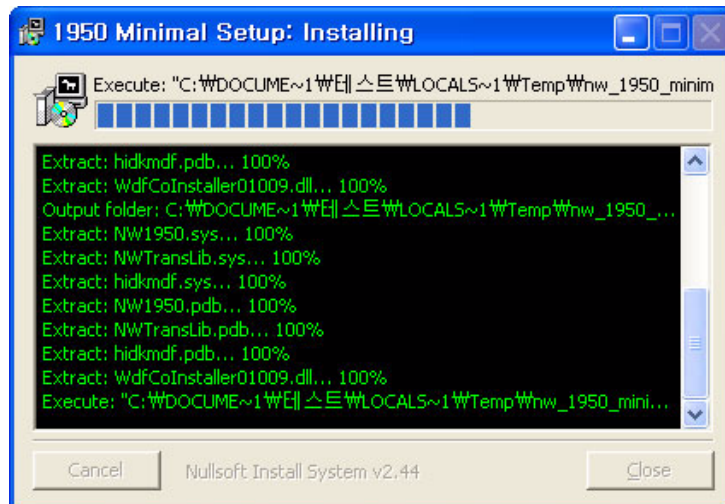

4. Complete the remaining installation steps according to the instructions displayed on the screen.
5. After installation is complete, select "Computer Management" -> "Device Manager" -> "Human Interface Device" to check if the driver has been installed successfully.

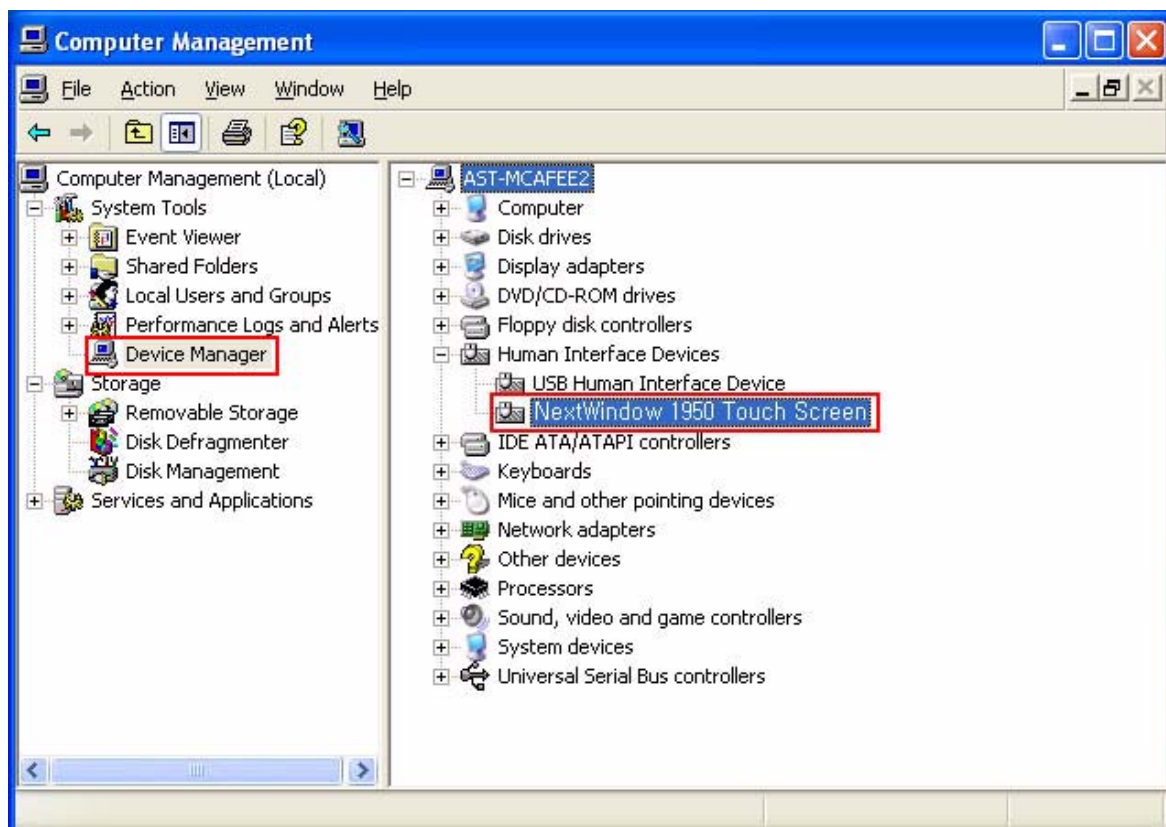







Product Operating Buttons



- Touch one of the operating buttons lightly.  
The LED buttons appear.


ICON		DESCRIPTION
1	MENU	<p>Press this button to view the On Screen Display (OSD).</p> <p>This button is also used to exit the OSD or to return to a higher-level OSD menu.</p> <p>* OSD Adjustment Lock</p> <p>This function locks the OSD in order to maintain the current settings or to prevent the settings from being changed by another person</p> <p>On: If you press and hold the MENU button down for 5 seconds, the OSD Adjustment Lock function is activated.</p> <p>Off: If you press and hold the MENU button down for 5 seconds again, the OSD Adjustment Lock function is disabled.</p> <p>Even if the OSD Adjustment Lock function is activated, users can adjust the brightness and contrast and can set up the adjustment function assigned to the [ ].</p>
2		<p>Users can set the Customized Key to one of the following functions. If the user presses the Customized Key [ ] after setting it, the configured function will be performed</p> <ul style="list-style-type: none"><li>&lt;PC&gt; mode: &lt;MagicBright&gt; - &lt;MagicAngle&gt; - &lt;MagicEco&gt; - &lt;Image Size&gt;</li><li>&lt;AV&gt; mode : &lt;Picture Mode&gt; - &lt;MagicAngle&gt; - &lt;MagicEco&gt; - &lt;Image Size&gt;</li></ul> <p>You can set the function of the Customized Key by selecting &lt;SETUP&amp;RESET&gt;-&gt;&lt;Customized Key&gt; in the OSD.</p>
3	▲/▼	Use these buttons to navigate the menu or to adjust a value in the OSD.
4		When OSD is not on the screen, push the button to adjust volume.




ICON		DESCRIPTION
5		<p>Use this button to select a function</p> <p>If you press the [] button when there is no OSD, the input signal (Analog/ HDMI) is switched. When the input signal is switched by pressing [] button or the product is turned on, a message displaying the selected input signal appears at the top left of the screen.)</p>
6	AUTO	<p>Press [AUTO] button to adjust the screen settings automatically</p> <p> This function is only available in Analog mode.</p> <p>If the resolution settings are changed in the Display Properties, the AUTO adjustment function is performed.</p>
7		<p>Press this button to turn the product on or off</p> <p><b>Power LED</b></p> <p>This LED is turned on when the product works normally.</p> <p> For more information on the power-saving function, refer to the power saving function in More Information. When not using the product for a long time, unplugging the power cord is recommended to minimize power consumption.</p>
8	Speaker	

## 3-6 Using the Screen Adjustment Menu (OSD: On Screen Display)


### The Screen Adjustment Menu (OSD: On Screen Display) Structure

TOP MENUS	SUB MENUS				
 PICTURE	Brightness	Contrast	Sharpness	MagicBright	Picture Mode
	MagicAngle	Coarse	Fine	HDMI Black Level	
 COLOR	MagicColor	Red	Green	Blue	Color Tone
	Color Effect	Gamma			
 SIZE & POSITION	H-Position	V-Position	Image Size	Menu H-Position	Menu V-Position
 SETUP&RESET	Reset	Language	MagicReturn	MagicEco	Off Timer On/Off
	Off Timer Setting	Customized Key	Auto Source	PC/AV Mode	Display Time
	Menu Transparency	LED On/Off	LED Brightness		
 INFORMATION					

### PICTURE

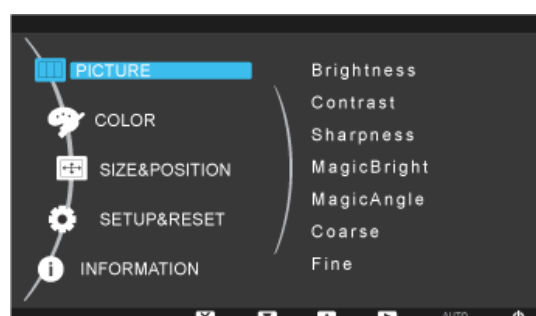



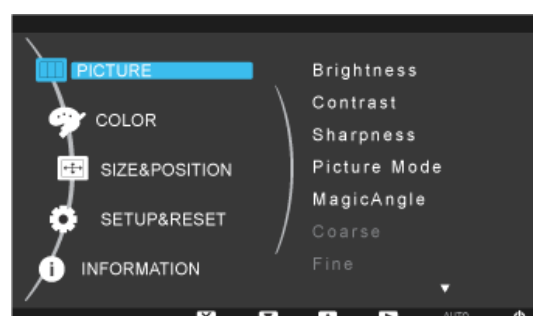






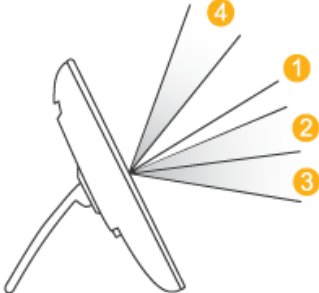
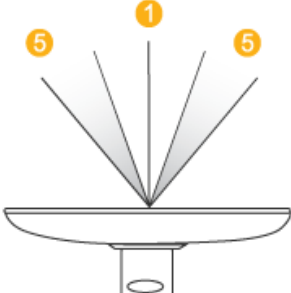




<PC signals>



<AV signals>

MENU	DESCRIPTION
Brightness	<p>Controls the screen brightness.</p> <ul style="list-style-type: none"> <li>This menu is unavailable when &lt;MagicBright&gt; is set to &lt;Dynamic Contrast&gt; mode.</li> <li>Only Supported when &lt;MagicEco&gt; is set to &lt;Power Saving off &gt;.</li> </ul>
Contrast	<p>Controls the contrast of the pictures displayed on the screen</p> <ul style="list-style-type: none"> <li>This menu is unavailable when &lt;MagicBright&gt; is set to &lt;Dynamic Contrast&gt; or &lt;Cinema&gt; mode.</li> <li>This menu is unavailable when &lt;MagicColor&gt; is set to &lt;Full&gt; mode or &lt;Intelligent&gt; mode.</li> <li>Only supported when &lt;Color Effect&gt; is set to &lt;Off&gt;.</li> </ul>








MENU	DESCRIPTION
Sharpness	<p>Controls the clarity of details of pictures displayed on the screen</p> <ul style="list-style-type: none"> <li>  This menu is unavailable when &lt;MagicBright&gt; is set to &lt;Dynamic Contrast&gt; or &lt;Cinema&gt; mode. </li> <li>This menu is unavailable when &lt;MagicColor&gt; is set to &lt;Full&gt; mode or &lt;Intelligent&gt; mode.</li> <li>Only supported when &lt;Color Effect&gt; is set to &lt;Off&gt;.</li> </ul>
MagicBright	<p>Provides preset picture settings optimized for various user environments such as editing a document, surfing the Internet, playing games, watching sports or movies and so on.</p> <ul style="list-style-type: none"> <li>           &lt;Custom&gt;            If the preset picture modes are not sufficient, users can configure the &lt;brightness&gt; and &lt;Contrast&gt; directly using this mode.         </li> <li>           &lt;Standard&gt;            This mode provides the picture setting appropriate for editing a document and surfing the Internet (text + picture).         </li> <li>           &lt;Game&gt;            This mode provides the picture setting appropriate for playing games that include lots of graphics and that require a fast screen refresh rate.         </li> <li>           &lt;Cinema&gt;            This mode provides brightness and sharpness settings similar to those of a TV for the best entertainment environment (movie, DVD, etc.).         </li> <li>           &lt;Dynamic Contrast&gt;            Controls the picture contrast automatically so that bright and dark pictures are balanced overall. </li> </ul> <p>  Supported when &lt;MagicAngle&gt; is set to &lt;Off&gt; and &lt;MagicEco&gt; is set to &lt;PowerSaving off&gt;. </p>
Picture Mode	<p>The Monitor has four automatic picture settings (&lt;Dynamic&gt;, &lt;Standard&gt;, &lt;Movie&gt; and &lt;Custom&gt;) that are preset at the factory. You can activate either &lt;Dynamic&gt;, &lt;Standard&gt;, &lt;Movie&gt; or &lt;Custom&gt;. You can select &lt;Custom&gt; which automatically recalls your personalized picture settings.</p> <ul style="list-style-type: none"> <li>           &lt;Dynamic&gt;            Select this mode to view a sharper image than in Standard mode.         </li> <li>           &lt;Standard&gt;            Select this mode when the surroundings are bright. This also provides a sharp image.         </li> <li>           &lt;Movie&gt;            Select this mode when the surroundings are dark. This will save power and reduce eye fatigue.         </li> <li>           &lt;Custom&gt;            Select this mode when you want to adjust the image according to your preferences. </li> </ul> <p>  <ul style="list-style-type: none"> <li>This can only be set when the external input is connected through HDMI and &lt;PC/AV Mode&gt; is set to &lt;AV&gt;.</li> <li>Supported when &lt;MagicColor&gt; is set to &lt;Off&gt; and &lt;MagicEco&gt; is set to &lt;PowerSaving off&gt;.</li> </ul> </p>

MENU	DESCRIPTION
MagicAngle	<p>This feature allows you to see optimal screen quality according to your viewing position.</p> <p>When viewing the screen at an angle from below, above or the side of the monitor, by setting the appropriate mode for each position you can obtain a similar picture quality as viewing the screen directly from the front.</p> <p> Set to &lt;Off&gt; when viewing directly in front of the screen.</p> <ul style="list-style-type: none"> <li>• &lt;Off&gt;  - Select when viewing from the front position.</li> <li>• &lt;Lean Back Mode1&gt;  - Select when viewing from a slightly lower position.</li> <li>• &lt;Lean Back Mode2&gt;  - Select when viewing from the lower position.</li> <li>• &lt;Standing Mode&gt;  -Select when viewing from the upper position.</li> <li>• &lt;Side Mode&gt;  - Select when viewing from the left or right position.</li> <li>• &lt;Custom&gt; - When &lt;Custom&gt; is selected, settings for &lt;Lean Back Mode 1&gt; is applied by default. Users can set suitable picture quality as needed.</li> </ul> <div style="display: flex; justify-content: space-around; align-items: center;">   </div> <p> • This menu is unavailable when &lt;MagicBright&gt; is set to &lt;Dynamic Contrast&gt; or &lt;Cinema&gt; mode.</p> <p>• Supported when &lt;MagicAngle&gt; is set to &lt;Off&gt; and &lt;Color Effect&gt; is set to &lt;Off&gt;.</p>
Coarse	<p>Removes vertical noise lines (line pattern) from the screen.</p> <p>The location of the screen may be changed after the adjustment. In this case, move the screen so that the screen is displayed at the center of the display panel using the &lt;H-Position&gt; menu.</p> <p> This function is only available in Analog mode.</p>
Fine	<p>Removes horizontal noise lines (line pattern) from the screen.</p> <p>If you cannot remove the noise completely with the &lt;Fine&gt; function, adjust the &lt;Coarse&gt; and then use the &lt;Fine&gt; function again.</p> <p> This function is only available in Analog mode.</p>
HDMI Black Level	<p>When a DVD or set-top box is connected to your TV via &lt;HDMI&gt;, it may cause a degradation in the screen quality, such as an increase in the black level, a low contrast, or discoloration, etc., depending on the external device connected. In this case, adjust the screen quality of your TV by configuring the &lt;HDMI Black Level&gt;.</p> <ul style="list-style-type: none"> <li>• &lt;Normal&gt;</li> <li>• &lt;Low&gt;</li> </ul> <p> The &lt;HDMI Black Level&gt; function is only enabled when the external device is connected via HDMI and the input signal is HDMI AV.</p>

## COLOR

 This is unavailable when <MagicBright> is set to <Dynamic Contrast> and <Cinema> mode.




MENU	DESCRIPTION
MagicColor	<p>Expresses natural colors more clearly without changing the picture quality using proprietary digital picture quality improvement technology developed by Samsung Electronics.</p> <ul style="list-style-type: none"> <li>• &lt;Off&gt; - Turns the MagicColor function off.</li> <li>• &lt;Demo&gt; - You can compare the pictures processed by MagicColor with the original pictures.</li> <li>• &lt;Full&gt; - Provides a clearer picture including areas corresponding to skin color.</li> <li>• &lt;Intelligent&gt; - Improves the chroma of pictures except for areas corresponding to skin color.</li> </ul> <p> • Supported when &lt;MagicAngle&gt; is set to &lt;Off&gt; and &lt;Color Effect&gt; is set to &lt;Off&gt;.</p>
Red	<p>You can adjust the red color value of pictures according to your preference.</p> <p> • This menu is unavailable when &lt;MagicColor&gt; is set to &lt;Full&gt; mode or &lt;Intelligent&gt; mode.</p> <p>• Only supported when &lt;Color Effect&gt; is set to &lt;Off&gt;.</p>
Green	<p>You can adjust the green color value of pictures according to your preference.</p> <p> • This menu is unavailable when &lt;MagicColor&gt; is set to &lt;Full&gt; mode or &lt;Intelligent&gt; mode.</p> <p>• Only supported when &lt;Color Effect&gt; is set to &lt;Off&gt;.</p>
Blue	<p>You can adjust the blue color value of pictures according to your preference.</p> <p> • This menu is unavailable when &lt;MagicColor&gt; is set to &lt;Full&gt; mode or &lt;Intelligent&gt; mode.</p> <p>• Only supported when &lt;Color Effect&gt; is set to &lt;Off&gt;.</p>
Color Tone	<p>You can set the color temperature according to your preference.</p> <ul style="list-style-type: none"> <li>• &lt;Cool&gt; - Sets the color temperature of the screen to a cooler color.</li> <li>• &lt;Normal&gt; - Sets the color temperature of the screen to the standard color temperature.</li> <li>• &lt;Warm&gt; - Sets the color temperature of the screen to a warmer color.</li> <li>• &lt;Custom&gt; - Select this menu to set the color temperature manually.</li> </ul> <p>If you do not like the preset color temperatures, you can manually adjust the colors of &lt;Color Effect&gt;.</p> <p> • This menu is unavailable when &lt;MagicColor&gt; is set to &lt;Full&gt; mode or &lt;Intelligent&gt; mode.</p> <p>• Supported when &lt;MagicAngle&gt; is set to &lt;Off&gt; and &lt;Color Effect&gt; is set to &lt;Off&gt;.</p>
Color Effect	<p>You can change the overall atmosphere by changing the color of pictures.</p> <p>This menu is unavailable when &lt;MagicColor&gt; is set to &lt;Full&gt; mode or &lt;Intelligent&gt; mode.</p> <ul style="list-style-type: none"> <li>• &lt;Off&gt; - Turns the color effect function off.</li> <li>• &lt;Grayscale&gt; - Displays pictures in black and white.</li> <li>• &lt;Green&gt; - Displays pictures in green mono color.</li> <li>• &lt;Aqua&gt; - Displays pictures in aqua mono color.</li> <li>• &lt;Sepia&gt; - Displays pictures in sepia mono color.</li> </ul> <p> • Supported when &lt;MagicAngle&gt; is set to &lt;Off&gt; and &lt;MagicColor&gt; is set to &lt;Off&gt;.</p>
Gamma	<p>Using this menu, you can change the intensity of the colors of medium brightness.</p> <ul style="list-style-type: none"> <li>• &lt;Mode1&gt; - &lt;Mode2&gt; - &lt;Mode3&gt;</li> </ul> <p> • Only supported when &lt;Color Effect&gt; is set to &lt;Off&gt;.</p>





## SIZE & POSITION

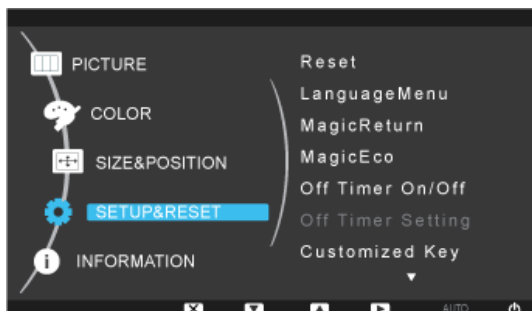


MENU	DESCRIPTION
H-Position	<p>Moves the position of the display area on the screen horizontally.</p> <ul style="list-style-type: none"> <li>This function is only available in Analog mode.</li> <li>Becomes enabled if the HDMI signal is received while the &lt;PC/AV Mode&gt; is set to &lt;AV&gt; and the image size is set to &lt;Screen fit&gt;.</li> </ul>
V-Position	<p>Moves the position of the display area on the screen vertically.</p> <ul style="list-style-type: none"> <li>This function is only available in Analog mode.</li> <li>Becomes enabled if the HDMI signal is received while the &lt;PC/AV Mode&gt; is set to &lt;AV&gt; and the image size is set to &lt;Screen fit&gt;.</li> </ul>
Image Size	<p><b>Analog signals</b></p> <ul style="list-style-type: none"> <li>&lt;Auto&gt; - The picture is displayed at the aspect ratio of the input signal.</li> <li>&lt;Wide&gt; - The picture is displayed in full screen regardless of the aspect ratio of the input signal.</li> </ul> <ul style="list-style-type: none"> <li>A signal not in the standard mode table is not supported.</li> <li>If the resolution is set to the optimal resolution, the aspect ratio does not change whether the &lt;Image Size&gt; is set to &lt;Auto&gt; or &lt;Wide&gt;.</li> </ul> <p><b>HDMI signals</b></p> <ul style="list-style-type: none"> <li>&lt;4 : 3&gt; - Displays pictures at the 4 : 3 aspect ratio.</li> <li>&lt;16 : 9&gt; - Displays pictures at the 16 : 9 aspect ratio.</li> <li>&lt;Screen Fit&gt; - If a 720P, 1080i or 1080P signal is input in HDMI input mode, the picture is displayed as is without truncation.</li> </ul> <ul style="list-style-type: none"> <li>This can only be set when the external input is connected through HDMI and &lt;PC/AV Mode&gt; is set to &lt;AV&gt;.</li> </ul>
Menu H-Position	You can adjust the horizontal position of the OSD.
Menu V-Position	You can adjust the vertical position of the OSD.

## SETUP&RESET



MENU	DESCRIPTION
Reset	<p>Use this function to restore the visual quality and color settings to the factory defaults.</p> <ul style="list-style-type: none"> <li>• &lt;No&gt; - &lt;Yes&gt;</li> </ul>
Language	<p>Select a language for the OSD.</p> <ul style="list-style-type: none"> <li>• <b>English, Deutsch, Español, Français, Italiano, Svenska, Русский, Português, Türkçe, Polski, Magyar</b></li> </ul> <p> The selected language is only applied to the product OSD. This setting does not affect the other functions of the PC.</p>
MagicReturn	<p>Only works in Windows 7 and recommended when using multiple monitors.</p> <ul style="list-style-type: none"> <li>• &lt;Off&gt; - When &lt;Off&gt; is selected, the &lt;MagicReturn&gt; function is turned off.</li> <li>• &lt;On&gt; - When &lt;On&gt; is selected, the &lt;MagicReturn&gt; function is turned on.</li> </ul> <p> <ul style="list-style-type: none"> <li>• This function does not support Analog mode.</li> <li>• This function is not supported when &lt;PC/AV Mode&gt; is set to &lt;AV&gt;.</li> <li>• This function is not available in Windows2000/XP/Vista system. It is suggested to select &lt;Off&gt;.</li> <li>• When the &lt;Check Signal Cable&gt; OSD is shown, user can keep pressing the ▼ Key for 5 seconds, then &lt;MagicReturn&gt; is set to &lt;Off&gt; automatically.</li> <li>• Some graphics cards do not support this function.</li> <li>• The &lt;Magic Return&gt; function may not work properly with graphics cards that are not fully compliant with DVI specifications. If this is the case, please contact the appropriate graphics card manufacturer or set the &lt;Magic Return&gt; function to &lt;Off&gt;.</li> </ul> </p>
MagicEco	<p>This function provides user a low power mode which is realized by lowering the controlling current of the display panel.</p> <ul style="list-style-type: none"> <li>• &lt;100%&gt; - When &lt;100%&gt; is selected, the power consumption is 100% of Default Setting.</li> <li>• &lt;75%&gt; - When &lt;75%&gt; is selected, the power consumption is 75% ± 15% of Default Setting.</li> <li>• &lt;50%&gt; - When &lt;50%&gt; is selected, the power consumption is 50% ± 15% of Default Setting.</li> <li>• &lt;Power Saving Off&gt; - When &lt;Power Saving Off&gt; is selected, the function is turned Off .</li> </ul> <p> This menu is unavailable when &lt;MagicBright&gt; is set to &lt;Dynamic Contrast&gt; mode.</p>
Off Timer On/Off	<p>You can turn the Off Timer on or off.</p> <ul style="list-style-type: none"> <li>• &lt;Off&gt; - &lt;On&gt;</li> </ul>
Off Timer Setting	<p>Turns the power off automatically when the configured time is reached.</p> <p> When &lt;On&gt; of &lt;Off Timer On/Off&gt; is selected, This function is available only.</p>



MENU	DESCRIPTION
Customized Key	<p>You can set the function of the Customized Key to one of the following.</p> <ul style="list-style-type: none"> <li>• &lt;PC&gt; mode: &lt;MagicBright&gt; - &lt;MagicAngle&gt; - &lt;MagicEco&gt; - &lt;Image Size&gt;</li> <li>• &lt;AV&gt; mode : &lt;Picture Mode&gt; - &lt;MagicAngle&gt; - &lt;MagicEco&gt; - &lt;Image Size&gt;</li> </ul>
Auto Source	<ul style="list-style-type: none"> <li>• &lt;Auto&gt; - The monitor automatically selects an input signal.</li> <li>• &lt;Manual&gt; - Users have to manually select an input signal.</li> </ul>
PC/AV Mode	<p>Set to PC when connected to a PC.</p> <p>Set to AV when connected to an AV device.</p> <p> This function does not support Analog mode.</p>
Display Time	<p>The OSD automatically disappears if no action is taken by the user.</p> <p>You can determine the time to wait before the OSD is hidden.</p> <ul style="list-style-type: none"> <li>• &lt;5 sec&gt; - &lt;10 sec&gt; - &lt;20 sec&gt; - &lt;200 sec&gt;</li> </ul>
Menu Transparency	<p>You can select the transparency of the OSD.</p> <ul style="list-style-type: none"> <li>• &lt;Off&gt; - &lt;On&gt;</li> </ul>
LED On/Off	<p>Turns the Menu button LED on or off.</p> <ul style="list-style-type: none"> <li>• &lt;Off&gt; - Turns the Power button LED lamp off.</li> <li>• &lt;On&gt; - Turns the Power button LED lamp on.</li> </ul>
LED Brightness	Adjusts the brightness of the Menu button LED in levels.

## INFORMATION



MENU	DESCRIPTION
INFORMATION	Shows the current frequency and resolution settings.

## 4 Installing the Software

---

### 4-1 Natural Color

---

#### What is Natural Color ?

This software works only for Samsung products and enables adjusting the displayed colors on the product and matches the colors on the product with the colors of the printed pictures. For more information, refer to the online help of the software (F1).

The Natural Color is provided online. You can download it from the website below and install;

[http://www.samsung.com/us/consumer/learningresources/monitor/naturalcolorexpert/pop\\_download.html](http://www.samsung.com/us/consumer/learningresources/monitor/naturalcolorexpert/pop_download.html)

### What is MagicTune?




MagicTune is a software program that helps with monitor adjustments by providing comprehensive descriptions of monitor functions and easy-to-understand guidelines.


Users can adjust the product with the mouse and the keyboard without using the operating buttons of the product.

### Installing the Software

1. Insert the installation CD into the CD-ROM drive.
2. Select the MagicTune setup program.

 If the pop-up screen for the software installation does not appear on the main screen, find and double-click the MagicTune setup file on the CD-ROM.

3. Select the installation language and click [Next].
4. Complete the remaining software installation steps according to the instructions displayed on the screen.

-  • The software may not work properly if you do not restart the computer after the installation.
- The MagicTune icon may not appear depending on the computer system and the product specifications.
  - If the shortcut icon does not appear, press the F5 key.

### Restrictions and Problems with the Installation (MagicTune™)

The installation of MagicTune™ may be affected by the graphics card, motherboard and the networking environment.

#### System Requirements

##### OS

- Windows 2000
- Windows XP Home Edition
- Windows XP Professional
- Windows Vista
- Windows 7

-  • For MagicTune™, Windows 2000 or later is recommended.
- Programs for Windows Vista and Windows 7 are provided on our website.

##### Hardware

- At least 32MB of memory
- At least 60MB of free space on the hard disk drive

 For more information, refer to the website.


### Removing the Software

You can only remove MagicTune™ through [Add or Remove Programs] in Windows.

To remove MagicTune™, complete the following steps.

1. Click [Start], select [Settings], and select [Control Panel] from the menu.  
For Windows XP, click [Start], and select [Control Panel] from the menu.

2. Double-click the [Add or Remove Programs] icon in the Control Panel.
3. In the [Add/Remove] window, find and select MagicTune™ so that it is highlighted.
4. Click [Change or Remove Programs] to remove the software.
5. Select [Yes] to start removing MagicTune™.
6. Wait until a message box appears informing you that the software has been removed completely.

 For technical support, the [FAQ \(frequently asked questions\)](#) or information about the software upgrade for MagicTune™, please visit our [website](#).

### What is MultiScreen ?




MultiScreen enables users to use the monitor by partitioning multiple sections.

### Installing the Software

1. Insert the installation CD into the CD-ROM drive.
2. Select the MultiScreen setup program.

 If the pop-up screen for the software installation does not appear on the main screen, find and double-click the MultiScreen setup file on the CD-ROM.

3. When the Installation Wizard appears, click [Next].
4. Complete the remaining software installation steps according to the instructions displayed on the screen.

-  • The software may not work properly if you do not restart the computer after the installation.
- The MultiScreen icon may not appear depending on the computer system and the product specifications.
- If the shortcut icon does not appear, press the F5 key.

### Restrictions and Problems with the Installation (MultiScreen)

The MultiScreen installation may be affected by the graphics card, motherboard and the networking environment.

#### Operating System

##### OS

- Windows 2000
- Windows XP Home Edition
- Windows XP Professional
- Windows Vista
- Windows 7

 For MultiScreen, the operating systems Windows 2000 or later is recommended.

##### Hardware

- At least 32MB of memory
- At least 60MB of free space on the hard disk drive

### Removing the Software

Click [Start], select [Settings]/[Control Panel], and then double-click [Add or Remove Programs].


Select MultiScreen from the program list and click the [Add/Delete] button.

# 5 Troubleshooting


---

## 5-1 Monitor Self-Diagnosis

---

-  • You can check if the product is working properly using the Self-Diagnosis function.
  - If a blank screen is displayed and the Power LED blinks even if the product and the PC are properly connected, perform the self-diagnosis function according to the procedures below.
1. Turn the product and the PC off.
  2. Separate the D-Sub cable from the product .
  3. Turn the product on.
  4. If the product is working properly, the 'Check Signal Cable' message appears.  
In this case, if a blank screen is displayed again, make sure that there is no problem with the PC and the connection. The product is working properly.

## 5-2 Before Requesting Service

 Please check the following before requesting After-Sales service. If the problem continues, please contact your nearest Samsung Electronics Service Center.

A BLANK SCREEN APPEARS / I CANNOT TURN THE PRODUCT ON	
Is the power cord connected properly?	Check the connection status of the power cord.
Is the "Check Signal Cable" message displayed on the screen?	Check the cable connecting the PC and the product. If the message appears on the screen even if the cable is properly connected, recheck the input signal by pressing the [ ] button of the product.
Is the "Not Optimum Mode" message displayed on the screen?	This occurs when the signal from the graphics card exceeds the maximum resolution or the maximum frequency of the product.  In this case, set up the appropriate resolution and the frequency for the product.
Is a blank screen displayed and does the power LED blink at a 1 second interval?	This occurs when the power saving function is running. If you click the mouse or press any key, the screen will be turned on.
THE IMAGE IS TOO LIGHT OR TOO DARK	
Adjust the Brightness and Contrast. (Refer to the <Brightness>, <Contrast>)  The display brightness can differ according to the mode set for <MagicAngle>. If <MagicBright> is set to <Dynamic Contrast>, the display brightness can differ according to the input signal.	
THE ON SCREEN ADJUSTMENT MENU (OSD) DOES NOT APPEAR.	
Did you cancel the screen adjustment?	Check if the <OSD Adjustment Lock> function is set to Off.
THE COLOR IS WEIRD / THE PICTURE IS DISPLAYED IN BLACK AND WHITE	
Is the entire screen displayed in the same color as if viewing the screen through a cellophane paper?	Check the cable connection to the computer. Reinsert the graphics card into the computer completely. Check if the <Color Effect> is set to <Off>.
Is the graphics card configured correctly?	Set up the graphics card referring to the user manual.
THE DISPLAY AREA SUDDENLY MOVES TO AN EDGE OR TO THE CENTER.	
Did you change the graphics card or the driver?	Please press the [AUTO] button to run the auto adjustment function.
Did you change the resolution and frequency appropriate to the product?	Set the resolution and the frequency to the appropriate values in the graphics card refer to the (Standard Signal Mode Table)
Is the graphics card configured correctly?	Set up the graphics card referring to the user manual.
THE PICTURES ARE OUT-OF-FOCUS.	
Did you change the resolution and the frequency appropriate to the product?	Set the resolution and the frequency to the appropriate values in the graphics card refer to the (Standard Signal Mode Table)

**THE COLOR IS DISPLAYED IN 16 BIT (16 COLORS). THE COLOR HAS BEEN CHANGED AFTER CHANGING THE GRAPHICS CARD.**

Did you install the device driver for the product?	<p>Windows XP : Set the color again by selecting Control Panel → Display → Settings.</p> <p>Windows Vista : Change the color settings by selecting " Control Panel" → "Appearance and Personalization" → "Personalization" → " Resolution" .</p> <p>Windows 7 : Change the color settings by selecting "Control Panel" → "Personalization" →" Display" →" Change display settings" →" Advanced settings" →" Monitor" .</p>
Is the graphics card configured correctly?	Configure the color again in accordance with the new graphics card driver.

**WHEN I LOOK AT THE EXTERIOR EDGES OF THE PRODUCT, SMALL ALIEN SUBSTANCES APPEAR ON IT.**

Since this product is designed so that the color has a soft appearance by coating it with a transparent material over the black edges, such things may be seen. This is not a defect of the product.

**A "BEEP, BEEP" SOUND IS HEARD WHEN BOOTING THE COMPUTER.**

If the beep sound is generated 3 or more times when booting up the computer, please request service for the computer.



FAQ!	PLEASE TRY THE FOLLOWING!
How can I change the frequency of the video signal?	<p>You have to change the frequency of the graphics card.</p> <p>(For more information, refer to the User Manual of the computer or the graphics card.)</p>
How can I change the resolution?	<p>Windows XP : Change the resolution by selecting Control Panel → Appearance and Themes → Display → Settings.</p> <p>Windows Vista : Change the resolution by selecting "Control Panel" → "Appearance and Personalization" → "Personalization" → "Resolution" .</p> <p>Windows 7 : Change the resolution by selecting "Control Panel" → "Personalization" → "Display" → "Adjust resolution" .</p> <p>(For more information, refer to the User Manual of the computer or the graphics card.)</p>
How can I use the power saving function?	<p>Windows XP : Configure it by selecting Control Panel → Appearance and Themes → Display → Screen Saver Setting or configure it in the BIOS Setup of the computer.</p> <p>Windows Vista : Change settings by selecting "Control Panel" → "Appearance and Personalization" → "Personalization" → "Screen Saver" . You can also use the BIOS SETUP menu on the PC.</p> <p>Windows 7 : Change settings by selecting "Control Panel" → "Personalization" → "Screen Saver" . You can also use the BIOS SETUP menu on the PC.</p> <p>(For more information, refer to the User Manual of the computer or the graphics card.)</p>

## 6 More Information

### 6-1 Specifications

MODEL NAME		LD220Z
LCD Panel	Size	21.5 inches (54 cm)
	Display area	476.64 mm (H) x 268.11mm (V)
	Pixel Pitch	0.24825 mm (H) x 0.24825 mm (V)
Synchronization	Horizontal	30 ~ 81 kHz
	Vertical	56 ~ 60 Hz
Display Color		16.7 M
Resolution	Optimum resolution	1920 X 1080 @ 60 Hz
	Maximum resolution	1920 X 1080 @ 60 Hz
Input Signal, Terminated		D-Sub HDMI, Speaker Out, Head-Phone Out 0.7 Vp-p $\pm$ 5 % Separate H/V sync, Composite TTL Level (V high $\geq$ 2.0 V, V low $\leq$ 0.8 V)
Maximum Pixel Clock		164 MHz (Analog, HDMI)
Power Supply		This product supports 100-240 V. Since the standard voltage may differ from country to country, please check the label on the back of the product. (Less than 30Ap-p at AC 120V or 50Ap-p at AC 220V)
Signal Cable		15pin D-sub Connector, HDMI connector, USB 1up/2down, Head-Phone
Dimensions (WxHxD) / Weight (Simple stand)		517.0 X 353.0 X 84.0 mm(20.4 X 13.9 X 3.3 inch) / 5.5 kg(12.1 lbs)
Tilt		10° ~ 30° ( $\pm$ 5°)
Environmental considerations	Operating	Operating Temperature : 50°F ~ 104°F (10°C ~ 40°C) Humidity :10 % ~ 80 %, non-condensing
	Storage	Storage Temperature : -4°F ~ 113°F (-20°C ~ 45°C) Humidity : 5 % ~ 95 %, non-condensing

#### Class B (Information Communication equipment for residential use)

This device has been registered regarding EMI for home use (Class B). It may be used in all areas. (Class B equipment emits less electromagnetic waves than Class A equipment.)

## 6-2 Power Saving Function

This product provides a power saving function that automatically turns the screen off when the product is not used for a predetermined period of time to reduce power consumption. If the product enters power saving mode, the power LED turns to a different color to indicate that the product is in power saving mode.

When the product is in power saving mode, the power is not turned off and you can turn the screen on again by pressing any key or clicking the mouse. However, the power saving function only works when the product is connected to a computer that provides the power saving function.

STATE		NORMAL OPERATION	POWER SAVING MODE	POWER OFF (SWITCH)
Power Indicator		On	Blinking	Off
Power Consumption	Without USB Cable	38 watts	Less than 0.8 watts	Less than 0.8 watts
	With USB Cable	43 watts	Less than 2.3 watts	Less than 2.3 watts

 If there is no power cut-off switch, the power consumption is "0" only when the power cord is disconnected.

## 6-3 Contact SAMSUNG WORLDWIDE

 If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care center.

NORTH AMERICA		
U.S.A	1-800-SAMSUNG(726-7864)	<a href="http://www.samsung.com/us">http://www.samsung.com/us</a>
CANADA	1-800-SAMSUNG(726-7864)	<a href="http://www.samsung.com/ca">http://www.samsung.com/ca</a>
MEXICO	01-800-SAMSUNG(726-7864)	<a href="http://www.samsung.com/mx">http://www.samsung.com/mx</a>
LATIN AMERICA		
ARGENTINA	0800-333-3733	<a href="http://www.samsung.com/ar">http://www.samsung.com/ar</a>
BRAZIL	0800-124-421 4004-0000	<a href="http://www.samsung.com/br">http://www.samsung.com/br</a>
CHILE	800-SAMSUNG(726-7864)	<a href="http://www.samsung.com/cl">http://www.samsung.com/cl</a>
COLOMBIA	01-8000112112	<a href="http://www.samsung.com/co">http://www.samsung.com/co</a>
COSTA RICA	0-800-507-7267	<a href="http://www.samsung.com/latin">http://www.samsung.com/latin</a>
ECUADOR	1-800-10-7267	<a href="http://www.samsung.com/latin">http://www.samsung.com/latin</a>
EL SALVADOR	800-6225	<a href="http://www.samsung.com/latin">http://www.samsung.com/latin</a>
GUATEMALA	1-800-299-0013	<a href="http://www.samsung.com/latin">http://www.samsung.com/latin</a>
HONDURAS	800-7919267	<a href="http://www.samsung.com/latin">http://www.samsung.com/latin</a>
JAMAICA	1-800-234-7267	<a href="http://www.samsung.com/latin">http://www.samsung.com/latin</a>
NICARAGUA	00-1800-5077267	<a href="http://www.samsung.com/latin">http://www.samsung.com/latin</a>
PANAMA	800-7267	<a href="http://www.samsung.com/latin">http://www.samsung.com/latin</a>
PUERTO RICO	1-800-682-3180	<a href="http://www.samsung.com/latin">http://www.samsung.com/latin</a>
REP. DOMINICA	1-800-751-2676	<a href="http://www.samsung.com/latin">http://www.samsung.com/latin</a>
TRINIDAD & TOBAGO	1-800-SAMSUNG(726-7864)	<a href="http://www.samsung.com/latin">http://www.samsung.com/latin</a>
VENEZUELA	0-800-100-5303	<a href="http://www.samsung.com/latin">http://www.samsung.com/latin</a>
EUROPE		
AUSTRIA	0810 - SAMSUNG(7267864,€ 0.07/min)	<a href="http://www.samsung.com/at">http://www.samsung.com/at</a>
BELGIUM	02 201 2418	<a href="http://www.samsung.com/be">http://www.samsung.com/be</a> (Dutch) <a href="http://www.samsung.com/be_fr">http://www.samsung.com/be_fr</a> (French)
CZECH REPUBLIC	800 - SAMSUNG (800-726786)  Distributor pro Českou republiku: Samsung Zrt., česká organizační složka, Oasis Florenc, Sokolovská394/17, 180 00, Praha 8	<a href="http://www.samsung.com/cz">http://www.samsung.com/cz</a>
DENMARK	8 - SAMSUNG (7267864)	<a href="http://www.samsung.com/dk">http://www.samsung.com/dk</a>
EIRE	0818 717 100	<a href="http://www.samsung.com/ie">http://www.samsung.com/ie</a>
FINLAND	30 - 6227 515	<a href="http://www.samsung.com/fi">http://www.samsung.com/fi</a>
FRANCE	01 4863 0000	<a href="http://www.samsung.com/fr">http://www.samsung.com/fr</a>
GERMANY	01805 - SAMSUNG (7267864,€ 0.14/Min)	<a href="http://www.samsung.de">http://www.samsung.de</a>

EUROPE		
HUNGARY	06-80-SAMSUNG(726-7864)	<a href="http://www.samsung.com/hu">http://www.samsung.com/hu</a>
ITALIA	800-SAMSUNG(726-7864)	<a href="http://www.samsung.com/it">http://www.samsung.com/it</a>
LUXEMBURG	02 261 03 710	<a href="http://www.samsung.com/lu">http://www.samsung.com/lu</a>
NETHERLANDS	0900 - SAMSUNG (0900-7267864) (€ 0,10/Min)	<a href="http://www.samsung.com/nl">http://www.samsung.com/nl</a>
NORWAY	3 - SAMSUNG (7267864)	<a href="http://www.samsung.com/no">http://www.samsung.com/no</a>
POLAND	0 801 1SAMSUNG (172678) 022 - 607 - 93 - 33	<a href="http://www.samsung.com/pl">http://www.samsung.com/pl</a>
PORTUGAL	808 20 - SAMSUNG (7267864)	<a href="http://www.samsung.com/pt">http://www.samsung.com/pt</a>
SLOVAKIA	0800-SAMSUNG(726-7864)	<a href="http://www.samsung.com/sk">http://www.samsung.com/sk</a>
SPAIN	902 - 1 - SAMSUNG (902 172 678)	<a href="http://www.samsung.com/es">http://www.samsung.com/es</a>
SWEDEN	0771 726 7864 (SAMSUNG)	<a href="http://www.samsung.com/se">http://www.samsung.com/se</a>
SWITZERLAND	0848-SAMSUNG(7267864, CHF 0.08/min)	<a href="http://www.samsung.com/ch">http://www.samsung.com/ch</a>
U.K	0845 SAMSUNG (7267864)	<a href="http://www.samsung.com/uk">http://www.samsung.com/uk</a>
CIS		
BELARUS	810-800-500-55-500	
ESTONIA	800-7267	<a href="http://www.samsung.com/ee">http://www.samsung.com/ee</a>
LATVIA	8000-7267	<a href="http://www.samsung.com/lv">http://www.samsung.com/lv</a>
LITHUANIA	8-800-77777	<a href="http://www.samsung.com/lt">http://www.samsung.com/lt</a>
MOLDOVA	00-800-500-55-500	
KAZAKHSTAN	8-10-800-500-55-500	<a href="http://www.samsung.com/kz_ru">http://www.samsung.com/kz_ru</a>
KYRGYZSTAN	00-800-500-55-500	
RUSSIA	8-800-555-55-55	<a href="http://www.samsung.ru">http://www.samsung.ru</a>
TADJIKISTAN	8-10-800-500-55-500	
UKRAINE	8-800-502-0000	<a href="http://www.samsung.com/ua">http://www.samsung.com/ua</a> <a href="http://www.samsung.com/ua_ru">http://www.samsung.com/ua_ru</a>
UZBEKISTAN	8-10-800-500-55-500	<a href="http://www.samsung.com/kz_ru">http://www.samsung.com/kz_ru</a>
ASIA PACIFIC		
AUSTRALIA	1300 362 603	<a href="http://www.samsung.com/au">http://www.samsung.com/au</a>
CHINA	400-810-5858 010-6475 1880	<a href="http://www.samsung.com/cn">http://www.samsung.com/cn</a>
HONG KONG	3698 - 4698	<a href="http://www.samsung.com/hk">http://www.samsung.com/hk</a> <a href="http://www.samsung.com/hk_en/">http://www.samsung.com/hk_en/</a>
INDIA	3030 8282 1-800-3000-8282 1800 110011	<a href="http://www.samsung.com/in">http://www.samsung.com/in</a>
INDONESIA	0800-112-8888	<a href="http://www.samsung.com/id">http://www.samsung.com/id</a>
JAPAN	0120-327-527	<a href="http://www.samsung.com/jp">http://www.samsung.com/jp</a>

ASIA PACIFIC		
MALAYSIA	1800-88-9999	<a href="http://www.samsung.com/my">http://www.samsung.com/my</a>
NEW ZEALAND	0800 SAMSUNG (0800 726 786)	<a href="http://www.samsung.com/nz">http://www.samsung.com/nz</a>
PHILIPPINES	1-800-10-SAMSUNG(726-7864) 1-800-3-SAMSUNG(726-7864) 1-800-8-SAMSUNG(726-7864) 02-5805777	<a href="http://www.samsung.com/ph">http://www.samsung.com/ph</a>
SINGAPORE	1800-SAMSUNG(726-7864)	<a href="http://www.samsung.com/sg">http://www.samsung.com/sg</a>
THAILAND	1800-29-3232, 02-689-3232	<a href="http://www.samsung.com/th">http://www.samsung.com/th</a>
TAIWAN	0800-329-999	<a href="http://www.samsung.com/tw">http://www.samsung.com/tw</a>
VIETNAM	1 800 588 889	<a href="http://www.samsung.com/vn">http://www.samsung.com/vn</a>
MIDDLE EAST & AFRICA		
SOUTH AFRICA	0860-SAMSUNG(726-7864)	<a href="http://www.samsung.com/za">http://www.samsung.com/za</a>
TURKEY	444 77 11	<a href="http://www.samsung.com/tr">http://www.samsung.com/tr</a>
U.A.E	800-SAMSUNG(726-7864) 8000-4726	<a href="http://www.samsung.com/ae">http://www.samsung.com/ae</a>

## 6-4 Correct Disposal of This Product (Waste Electrical & Electronic Equipment) - Europe only

---



(Applicable in the European Union and other European countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

